

User Manual — NETSTAT One Keyboard, Pink

Pink slim wireless keyboard, QWERTY layout.

CONTENTS

1. General Presentation
2. What's in the Box
3. Wireless 2.4G Connection
4. Function Keys & Shortcuts
5. Specifications
6. Battery and Charging
7. Troubleshooting
8. Usage & Care Tips
9. Certificate of Warranty

1 General Presentation

Congratulations on choosing NETSTAT One Keyboard, Pink! You picked a comfortable keyboard with a fast response and solid build. This manual helps you set it up and use it correctly. We are here for you non-stop — if you have any question, message us on WhatsApp and we are happy to help.

2 What's in the Box

- 1 x Keyboard
- 1 x USB Receiver
- 1 x Manual

3 Wireless 2.4G Connection

1. Take the nano USB receiver out of the package (or the product compartment).
2. Plug the receiver into a free USB port on your computer.
3. Turn the product on with the ON/OFF switch (if present) — it connects automatically within seconds.
4. The included USB-C cable is used for charging (see the Battery section).

The 2.4G connection has a range of up to 10 m and low latency. If the signal is weak, use a USB extension to bring the receiver closer.

4 Function Keys & Shortcuts

- Combine the Fn key with the F1–F12 row for media functions: volume, play/pause, next and previous track.
- LED indicators show the Caps Lock and Num Lock status.
- On backlit models, Fn shortcuts change the lighting effects and brightness.
- Place the keyboard on a flat surface; the adjustable feet set the tilt.

5 Specifications

- Wireless 2.4GHz
- QWERTY layout
- Slim design
- Compatibility: Windows, macOS, Linux

6 Battery and Charging

- Charge with the included USB-C cable, plugged into a USB port or a phone charger.
- An LED indicator flashes when the battery is low.
- A full charge usually takes 2–3 hours.
- On wired/USB-C models you can keep using the product while it charges.
- Turn the product off with the switch when not in use to save battery.

7 Troubleshooting

Keyboard not responding	Check the connection (receiver or cable), turn on the switch and charge the battery (on wireless models).
Some keys not working	Clean around the keys with compressed air; test on another computer.
Wrong characters typed	Check the keyboard language and layout in your operating system settings.
Lighting not working	Check the Fn lighting shortcut; on low battery the lighting may turn off automatically.

8 Usage & Care Tips

- Clean periodically with a soft, slightly damp cloth — do not use solvents or abrasives.
- Keep the product away from moisture, excessive dust and extreme temperatures (direct sun, radiators).
- Do not drop the product or carry it by the cable — plug/unplug by holding the connector.
- Keep the box and warranty card — they are useful for returns or warranty service.
- Turn the keyboard over and shake gently or use compressed air to clear crumbs between the keys.
- Do not eat or drink over the keyboard — liquids can damage the electronics.

9 Certificate of Warranty

- Warranty period: 2 years from the purchase date for hardware defects.
- Within 7 days: replacement if appearance and packaging are complete (with valid proof of purchase).
- Within 60 days: replacement at the point of purchase or the designated service centre.
- Within 2 years: repair or replacement at the designated service centre — delivered to your address.
- Contact: NETSTAT TRADING SRL, Bucharest, Sector 4 · +40 736 374 440.